



COAX  
**GENIUS**  
INTELLIGENT MAPPING


# QUICKSTART GUIDE




- 1** Power Remotes by pressing the **MODE** button for 2 seconds. Upon boot the Remote's Activity LED will indicate the battery level (green, yellow, red).




- 2** Place Remotes in locations to be mapped.

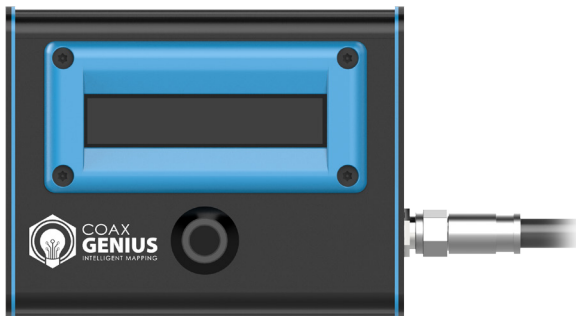

- 3** Connect the Receiver to a location you suspect is connected to the same RF system as the installed Remotes.

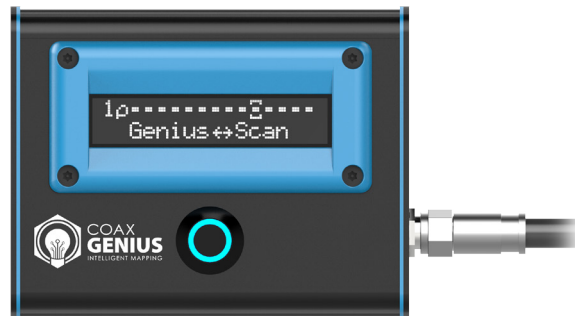

- 4** Press the button on the Receiver to power up and begin Genius Scan.

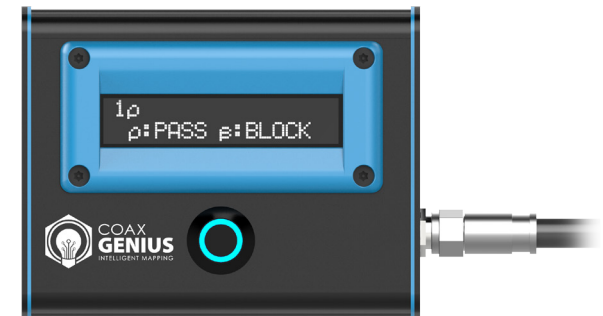

- 5** If Remotes are located on the same RF system as the Receiver, their ID numbers will be displayed. Please see the operation manual for further details on Genius Scan and its results.

Watch our Coax Genius Training Videos at [videos.coaxgenius.com](https://videos.coaxgenius.com) or download our full Coax Genius Operation Manual at [manual.coaxgenius.com](https://manual.coaxgenius.com)